




**CECILWARE - Equipment Stands  
#430 Stainless Steel**

**Assembly Instructions:**


**EQS-4-2418-BS, EQS-4-2424-BS, EQS-4-2436-BS,  
EQS-4-2448-BS, EQS-4-3012-BS, EQS-4-3024-BS,  
EQS-4-3036-BS, EQS-4-3048-BS, EQS-4-3060-BS  
& EQS-4-3072-BS**

**Cecilware Corporation**  
43-05 20<sup>th</sup> Avenue  
Long Island City, NY 11105  
Tel: 800-935-2211  
Fax: 718-932-7860  
[www.cecilwarephotos.com](http://www.cecilwarephotos.com)

## Section 1

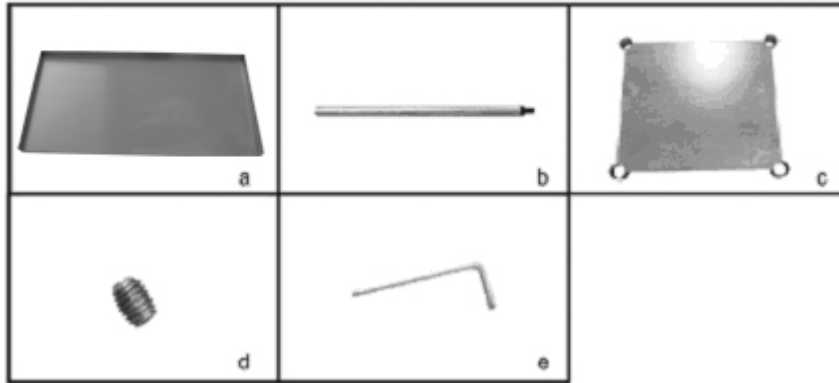

## Section 2

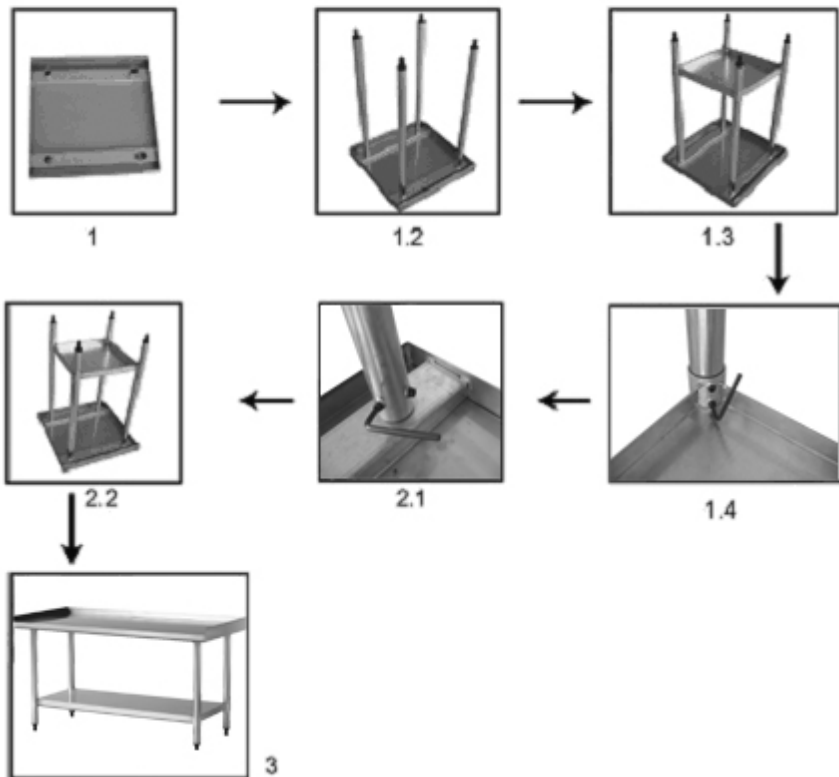

## Parts List- See Section 1

- 1 Stainless Steel Table Top
- 4 Galvanized Legs (6 Legs for EQS-4-3072-BS)
- 1 Galvanized Shelf
- 16 Stainless Steel Set Screws (24 Screws for EQS-4-3072-BS)
- 1 Allen Key

## Assembly – See Section 2

- Carefully remove all of the parts from the carton.
- Place table top face down on level surface.
- Insert each leg through each of the sockets on the table top.
- Lower the galvanized under shelf over assembled table legs through holes provided on shelf. Position the shelf at the marked line which is 6" from the bottom of legs). Use the set screws to fix the shelf to legs.
- Use set screws to fix legs to table top.
- Adjust the legs so that they are level and firmly located in each socket. Tighten all screws on table top and the corner of galvanized under shelf.
- Turn the table over and set it upright. If there is any movement in the table, the feet can be used to make adjustment and level the table ready for use.
- Before using the table, we recommend that you clean it thoroughly using a cleaning agent recommended for stainless steel, ensuring all cleaning agents and moisture are removed from the table top before use.

## Care of the Table

- Clean the table regularly as required, using a cleaning agent recommended for stainless steel and galvanized surfaces.
- Always clean off any cleaning solution residue, as failure to do so may cause discoloring and marks to develop.
- Never leave any surface with water or damp areas, as this may cause discoloration.

## Warning

- Whilst Cecilware attempts to remove all sharp edges, care must be taken when cleaning or handling the table to prevent the risk of injury from exposed metal edges.
- Do not overload the table causing the top or shelf to bend.

**Cecilware Corporation**  
43-05 20<sup>th</sup> Avenue  
Long Island City, NY 11105  
Tel: 800-935-2211  
Fax: 718-932-7860  
[www.cecilwarephotos.com](http://www.cecilwarephotos.com)